

LEAF SAP SAMPLING GUIDE

Apple/Pear



Keep in mind!

- Avoid outer rows and first 20 feet of a row.
- Sample leaves with average leaf quality. Sample areas of abnormal growth separately.
- Sample consistently; sunny side of tree, avoid extreme weather etc.
- If leaves are wet at sampling lightly pat dry before shipping (moisture influences results).
- Sap Analysis data works best when used in progression. The more samples the better crop nutrient uptake can be illustrated and understood.
- Note fertilizer and irrigation times and application rates if possible.
- Sample either before or 3+ days after fertilizer/pesticides have been applied.



Sampling Instructions

Sample Time: Sample in the morning before 11 a.m. and temperatures less than 80 °F to ensure adequate leaf tension and moisture. Avoid sampling in the rain. Store samples in cooler.

Sample Size: Collect 90+ grams each of both new (young) and old leaves + petiole for a collected total of 180+ grams per sample set. Bag leaves separately labeled New and Old.

Initial Sampling: Begin sampling at leaf out when new leaves are fully developed and expanded. Place leaves + petiole in zip locked bag labeled New. Growth Stage: Pre-bloom

Sequential Samples: New/Old leaf sample sets taken at growth stages: bloom, petal fall, fruit set, fruit fill, pre-harvest.

NEW- Sample youngest fully formed leaves (3rd or 4th leaf from the growth point of the shoot). Place stacked leaves + petiole in a zip lock bag labeled NEW.

OLD- Sample still healthy and functional leaves (the 2nd or 3rd to last leaf from the base of the shoot). Place stacked leaves + petiole in separate gallon zip lock bag labeled OLD.


****Do not mix varieties when sampling as this may cause variation in analyses****

Science You Can Use, Partners You Can Trust

160 Veterans Blvd, South Haven, MI 49090 (269) 637-5658 (888)-685-1628

LEAF SAP SAMPLING GUIDE

Apple/Pear

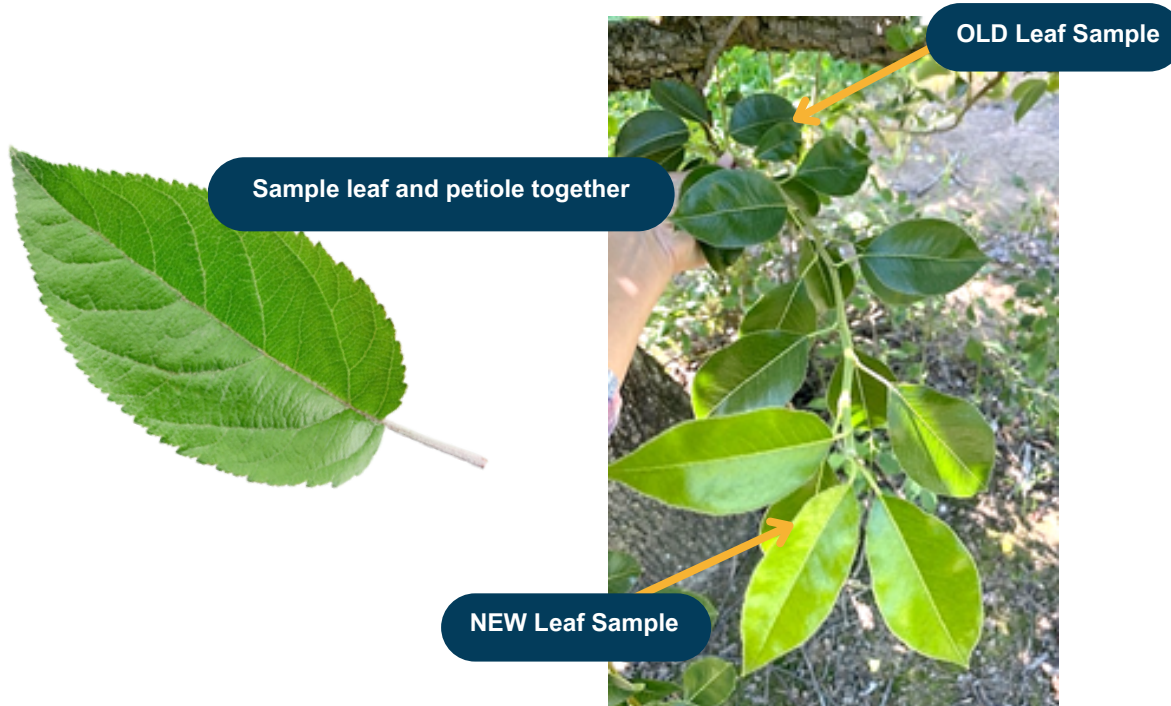

Keep samples cool. Ship overnight or 2-day on M/T/W (morning arrival time) with ice packs. Samples should not come into direct contact with ice packs. Let air out of bags before shipping.

All samples must be accompanied by a fully completed Sample Submission Form. Fillable version available on our website www.newagelaboratories.com.

Science You Can Use, Partners You Can Trust

160 Veterans Blvd, South Haven, MI 49090



(269) 637-5658



(888)-685-1628